

How to Replace Remote Transmitter Batteries:

Battery Replacement

When a malfunction is suspected, replace the battery, using a 12-volt Duracell type MN21 battery, or equivalent.

1. Remove the phillips screw from the back of the transmitter.
2. Carefully remove the old battery and install the new battery, check for correct polarity.
3. Reinstall the top of the transmitter and phillips screw, do not over tighten.

